

YOU are more VALUABLE to US, THANKS for choosing



www.goldsun.in

**GOLDSUN**

**PARTS INSTALLATION GUIDE**

**MODEL : BLUESTYLE**  
**VEHICLE : A-STAR**


**FASTENERS KIT**

- M8 x 30 mm - Flange Hex Bolt - 2 Nos
- M8 - Flange Hex Nut - 2 Nos
- M6 x 20 mm - Flange Hex Bolt - 2 Nos



A-Star

Support  
Clamp

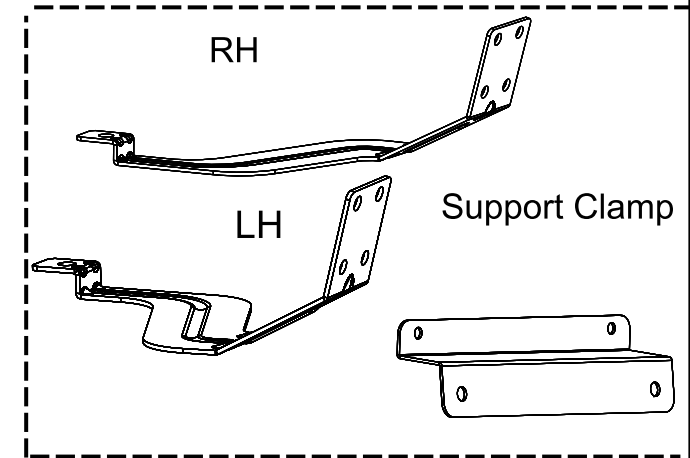

RH

LH

Support Clamp



Base  
Clamp RH

NUDGE GUARD

Base  
Clamp LH

**NOTE :**

- 1, Mount the Base clamp with Nudge Guard.
- 2, Mount the Support Clamp to Vehicle.
- 3, Mount the Base clamp to the Vehicle as marked in the adjacent Photo.
- 4, Connect the Support Clamp & Nudge Guard.
- 5, Ensure the Center Alignment of the Nudge guard & Tighten the Bolts.