

YOU are more VALUABLE to US, THANKS for choosing



www.goldsun.in


**GOLDSUN**

**PARTS INSTALLATION GUIDE**

**MODEL : BLUESTYLE**  
**VEHICLE : FIGO**

**FASTENERS KIT**

M10 x 25 mm	- Flange Hex Bolt	- 2 Nos
M10	- Flange Hex Nut	- 2 Nos
M8 x 25 mm	- Flange Hex Bolt	- 2 Nos
M8	- Flange Hex Nut	- 2 Nos

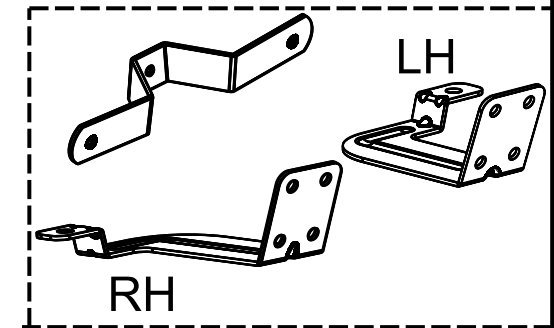

Support Clamp



**NOTE :**

- 1, Mount the Base clamp with Nudge Guard.
- 2, Mount the Support Clamp to Vehicle using M6 Bolt.
- 3, Mount the Base clamp with Vehicle as marked in the adjacent Photo.
- 4, Connect the Nudge Guard & the Support Clamp.
- 5, Ensure the Center Alignment of the Nudge guard & Tighten the Bolts.

Base  
Clamp RH

NUDGE GUARD

Base Clamp LH

