

YOU are more VALUABLE to US, THANKS for choosing



www.goldsun.in



**GOLDSUN**

**PARTS INSTALLATION GUIDE**

**MODEL : BLUESTYLE**  
**VEHICLE : VISTA**

**FASTENERS KIT**

M8 x 30 mm	- Flange Hex Bolt	- 2 Nos
M8	- Flange Hex Nut	- 2 Nos
M6 x 20 mm	- Flange Hex Bolt	- 2 Nos

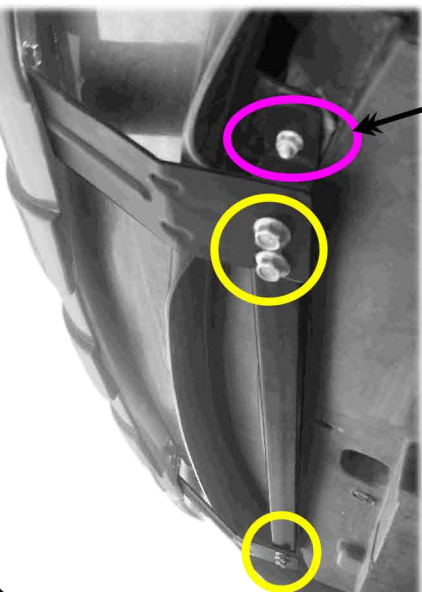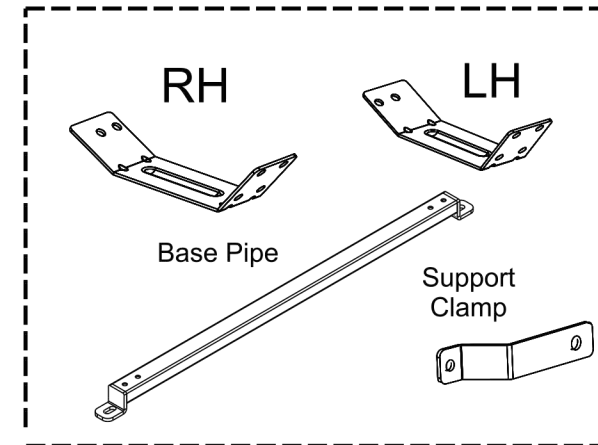

Base Pipe

The Arrow shows the Mounting area of the Base Pipe to the Vehicle

BASE PIPE

Base Clamp RH

NUDGE GUARD

Base Clamp LH

**NOTE :**

- 1, Mount the Base clamp with Nudge Guard.
- 2, Mount the Support Clamp to Vehicle using M6 Bolt.
- 3, Mount the Base pipe to the vehicle as position marked in the adjacent Photo.
- 4, Mount the Base clamp with Base Pipe as marked in the adjacent Photo.
- 5, Connect the Nudge Guard & the Support Clamp.
- 6, Ensure the Center Alignment of the Nudge guard & Tighten the Bolts.